


Must be applied to a clean, dry surface.

1. Place the graphic into position and verify the edges are not over a joint or grout line.



2. Turn graphic over and peel back several inches of the liner and then crease it.

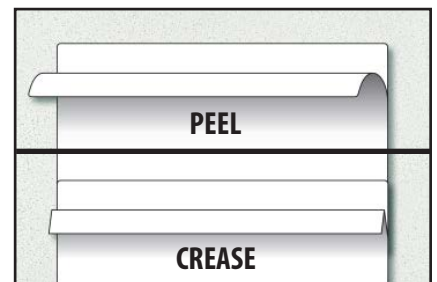

3. Turn the graphic back over and tack it into position with light pressure.



4. Using a plastic squeegee, press the graphic in place as you remove the liner. Work from the center to the edges.



5. Use overlapping strokes and work slowly to avoid trapping air bubbles under the graphic.



6. When the graphic is in place, squeegee all edges again to ensure a strong bond with the surface.